

## FRONT SIDE

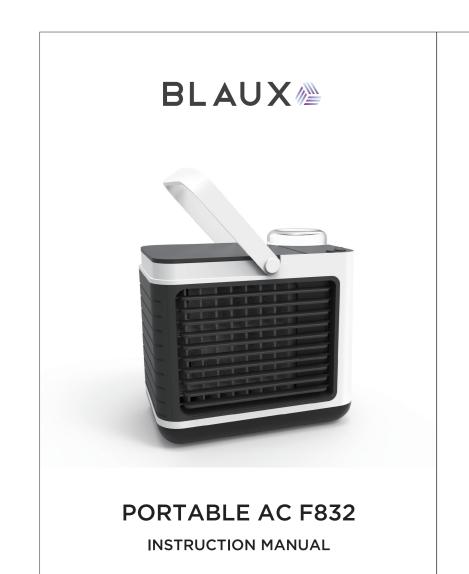

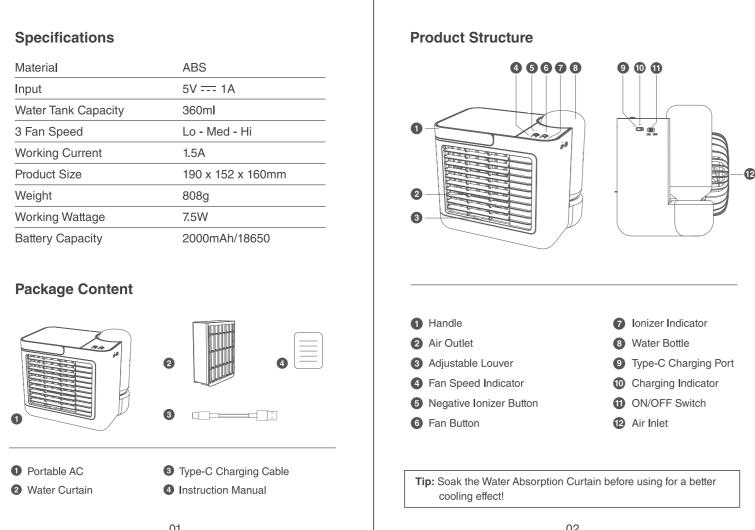

### **Indicator Status Description** Indicator Status Charning Indicator Fan Indicator Neg Ignizer

Indicator Status	Charging Indicator	Fan Indicator	Neg Ionizer
One blue light is on	_	Low Speed	_
Two blue lights are on	_	Medium Speed	
Three blue lights are on	_	High Speed	
Blinking blue lights	_	Rhythmic Breeze	
The green light is on	_	_	Ionizer On
The red light is on	Charging	_	_
The green light is blinking	The battery is low	_	
Red light Off	Fully charged	_	_

#### How To Start The Fan/Rhythmic Breeze/Ionizer

- The fan is powered/charged using a Type-C charging cable. You can connect the fan with a charging adapter or your computer's USB port.
- 2. Press the Fan button to start and cycle through the speed of the fan. There are 3 speeds to press and the fourth is off.
- 3. To turn on the Rhythmic Breeze Fan mode select the desired fan speed and then press and hold the Fan button (2 seconds) the blue LED lights will start blinking.
- 4. Press the Negative Ionizer button to turn on this mode.
- 5. Press and hold the Negative Ionizer button (2 seconds) to turn on internal light. Press and hold again (2 seconds) to turn it off.

# **BACK SIDE**





**How To Maximize Your Cooling By Adding Ice** 

Attention: After the product is filled with water, it must remain

upright to prevent any water from penetrating the circuit board or fan.



 
# 1. Open the top cover






Tips: If the fan is not in use for a long time, drain the water from

### **How To Replace The Water Curtain**



 2. Remove the old water





3. Replace the water absorption 4. Place the top cover back

the unit and air-dry the water curtain. The water absorption curtain generally last 6-8 months. Replace accordingly based on usage.


### **Safety Precautions**

 - Check device voltage compatibility with this product before using it;
- Do not disassemble or abuse product;
- Avoid exposure to heat or direct sunlight;
- Keep product out of reach of children and pets;
- Please use included Type-C cable;
- Turn off the Portable AC before cleaning the fan or removing the water
- Regularly clean the inside and outside of the fan to prevent dust from
- Do not put your fingers or hard objects into the intake/outlet;
- Stop using the product if it starts to malfunction.

### Notice 🥂

- 1. Please keep unit on level surface to avoid spill.
- 2. Do not tilt or turn unit upside down when water tank is attached.
- 3. For best cooling effect: Pre-soak the water curtain in water before use.
- 4. Drain and dry unit and water curtain after use.

The device complies with the European Directives 2014/30/EU.



devices in other ways. Please ask the municipal administration where the appropriate disposal facility is located. Subject to change.

This device complies with part 15 of the FCC Rules.

封面

IM Dimensions: 148 x 105mm Double Side Printing Black&White